


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	PLA160ST-RT	INSIDE TRIM	1
2	PLA160RT-O	OUTSIDE TRIM	1
3	PLM50RR	MORTISE LOCK	1
4	PLOVSCR45	M4 MACHINE SCREW	2
5	SPDL31	SPINDLE 1 3/8 DOOR	1
6	SPDL41	SPINDLE 1 3/4 DOOR	1
7	PL-FP50	FRAME PLATE	1
8	PL-KNPVT	PIVOT KNOB	1
9	PL-KNSTR	STRAIGHT KNOB	1
10	PL-KNADA	ADA KNOB	1
11	PL-STK50	STRIKE PLATE	1
12	PL-DB50	DUST BOX	1
13	PL-CCLIPS	SNAP RING	2
14	PL-160ER	EMERGENCY RELEASE BUTTON	1
15	#8 x 3/4" WOOD SCREW		4

**Linnea**<sup>®</sup>

www.linnea-home.com Toll Free 800-219-2366 Ph 770-559-9035


PL160R-PR

**ALIGN WITH CENTER OF DOOR FRAME**

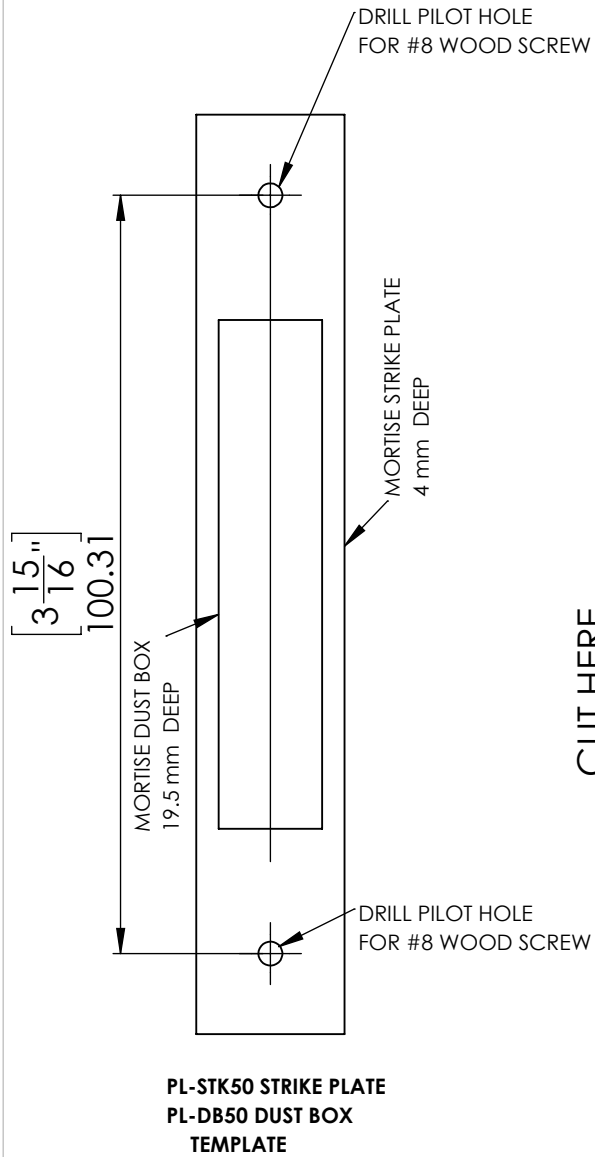


MEASUREMENTS ARE IN INCHES AND MILLIMETERS  
INCHES ARE SHOWN IN [ ]

**ALIGN WITH CENTER OF DOOR**

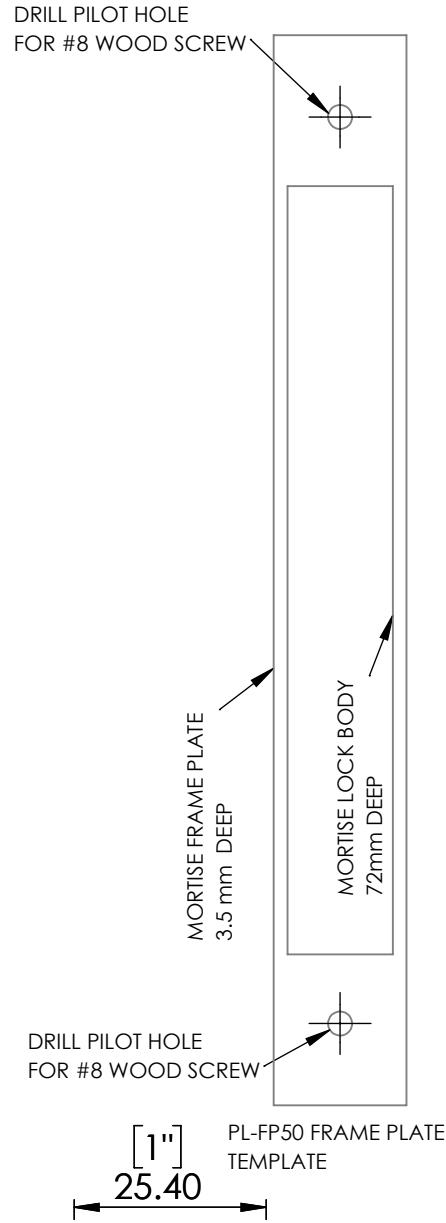


PRINT THIS PAGE AT 100% SCALE

**1 3/4" DOOR THICKNESS**

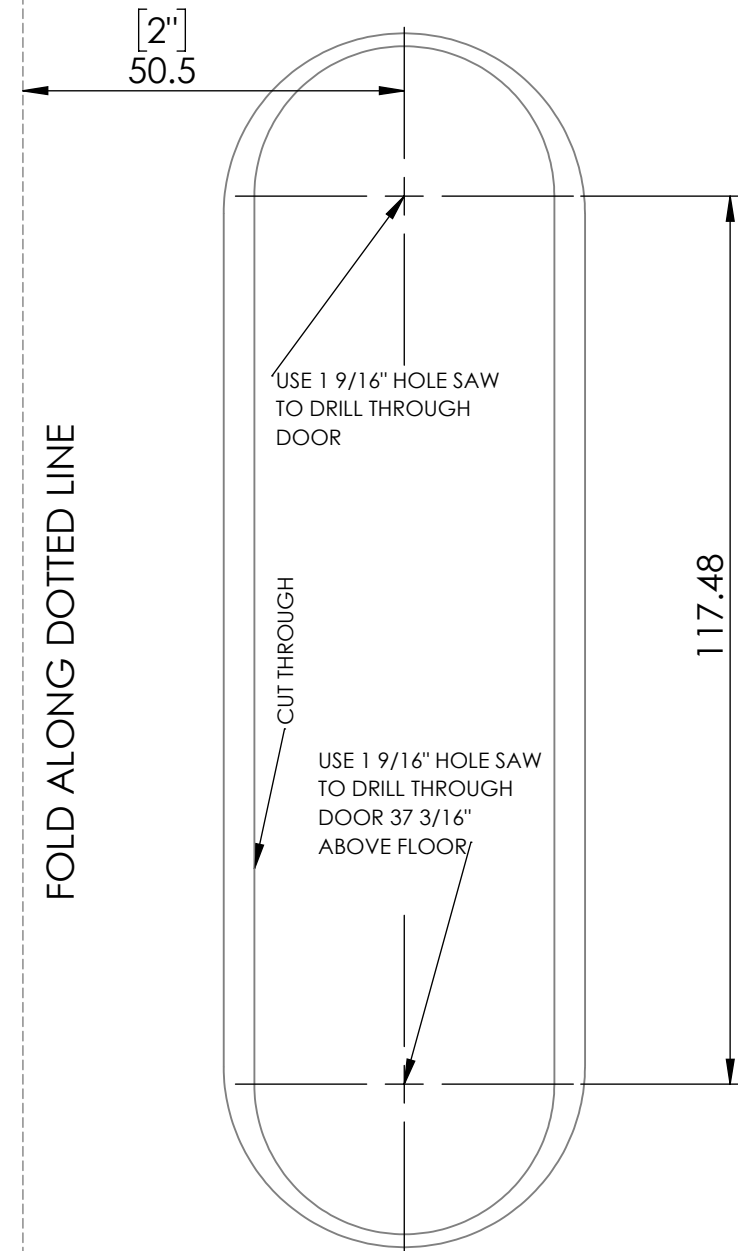


**ALGIN WITH CENTER OF DOOR FRAME**

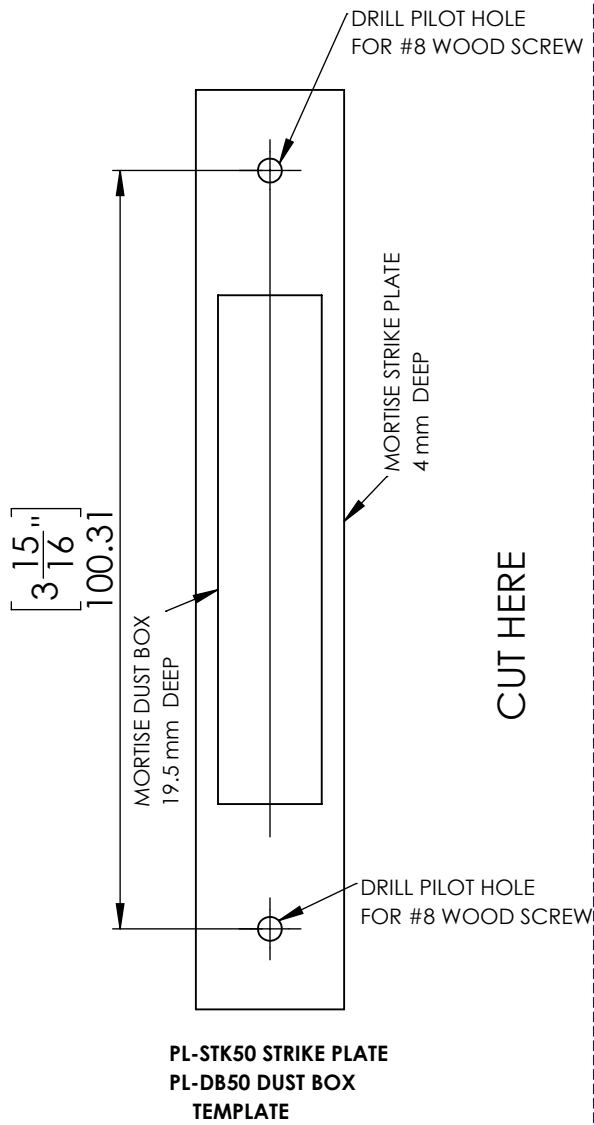


MEASUREMENTS ARE IN INCHES AND MILLIMETERS  
INCHES ARE SHOWN IN [ ]

**ALGIN WITH CENTER OF DOOR**

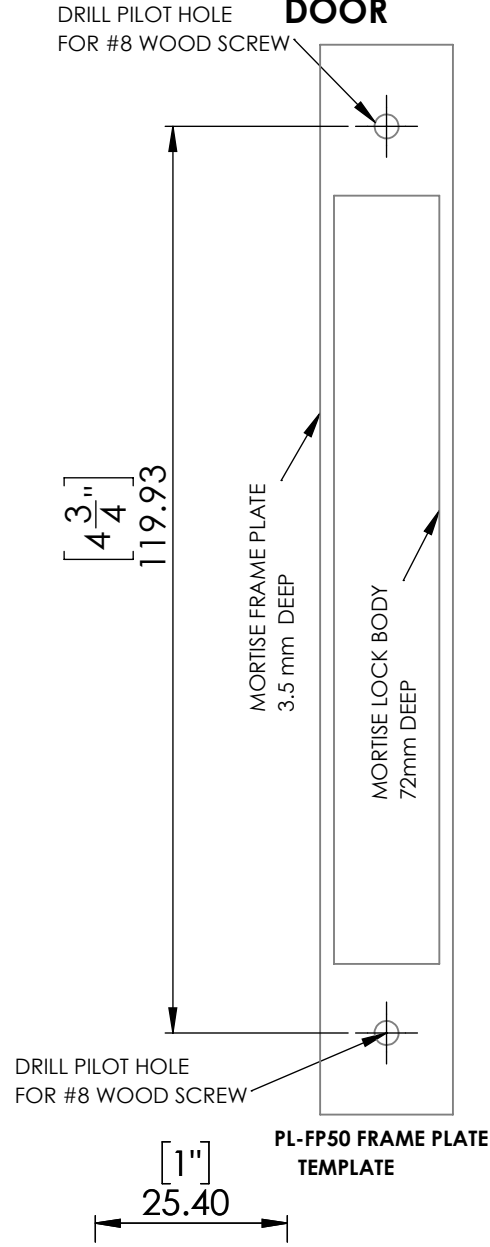


**PRINT THIS PAGE AT 100% SCALE**

**1 3/8" DOOR THICKNESS**

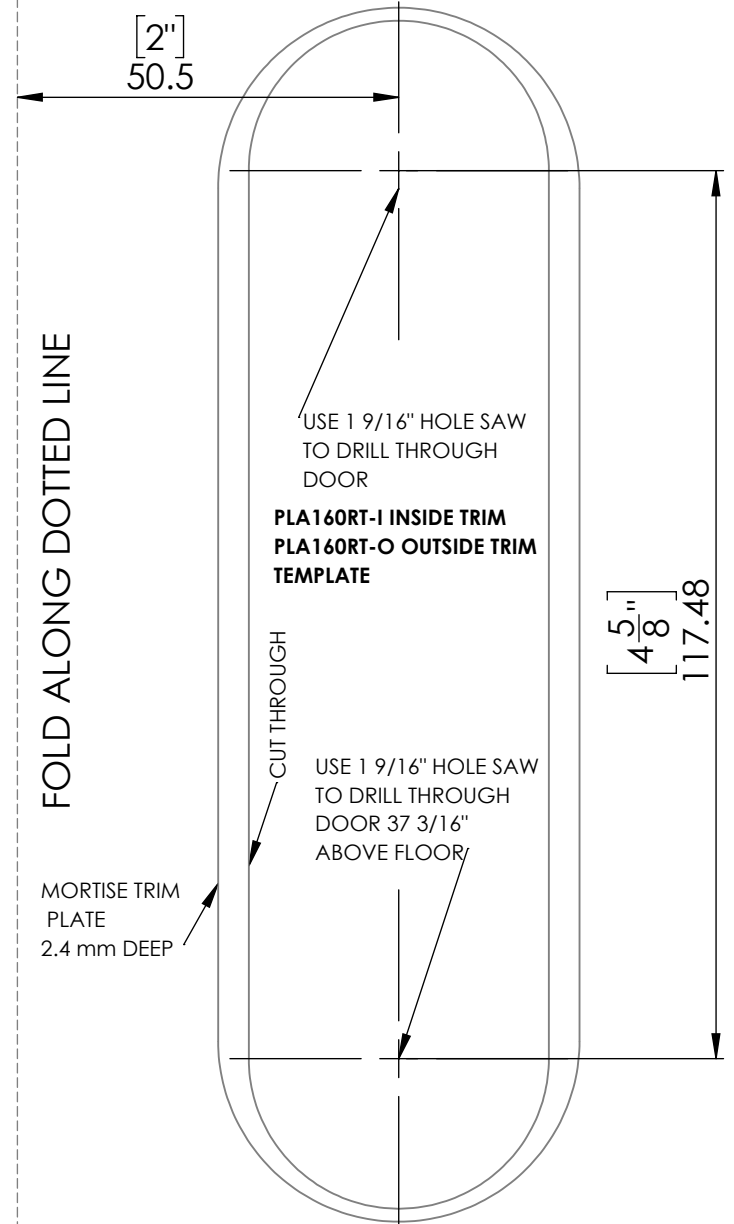


Print template full scale  
paper template.  
Drill 3.175 mm [ 1/8" ]  
on door center  
943.4mm [ 37 9/64" ]  
above floor

STEP 1

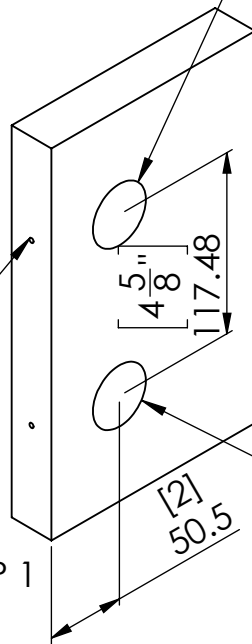


Print template full scale  
fold and position on door.  
Use hole saw to drill  
39.68 mm [ 1 9/16" ]  
through door.

Print template full scale  
fold and position on door.  
Use hole saw to drill  
39.68 mm [ 1 9/16" ]  
through door 944.5mm [37 3/16"]  
above floor.

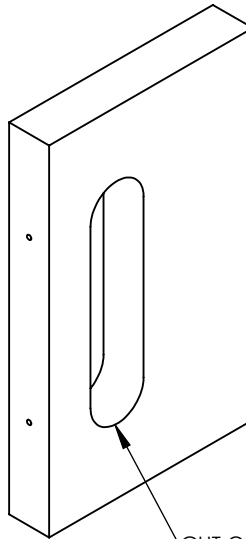

STEP 2

CUT OVAL  
THROUGH DOOR

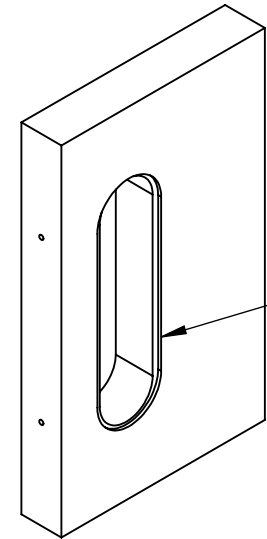


STEP 3

MORTISE TRIM  
PLATE  
2.4 mm DEEP

MORTISE FACE PLATE  
3.5 mm DEEP

STEP 4

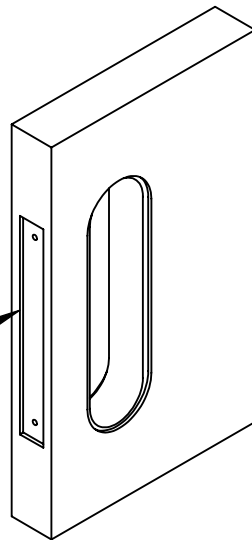

MORTISE LOCK BODY  
72mm DEEP

STEP 5

