



ASSA ABLOY

# RESIDENTIAL THRESHOLD


Applies to the following thresholds:

206\_V, 207\_V

## Testing/Ratings:



## Tools Required:



## Installation Instructions:

### Top (plan) view of door opening (out-swing type)

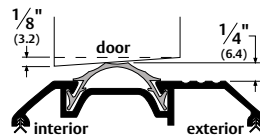
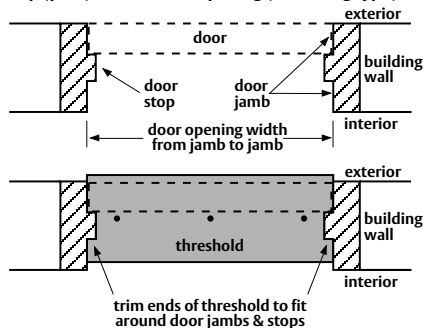


Figure 1

1. For best seal, in-swing door should be beveled  $1/8$ " (3.2 mm) longer on inside. Maximum clearance between bottom of door and top of threshold (with vinyl seal removed) is  $1/4$ " (6.4). (See Figure 1).
2. Measure width of door opening from jamb to jamb and stop to stop and mark ends of threshold for trimming.
3. Trim ends of threshold to fit around door jambs & stops, so that vinyl top is centered under door.
4. With vinyl seal removed, drill pilot holes in floor through pre-drilled holes in threshold.
5. Press vinyl feet into grooves at underside of threshold legs. (See Figure 2).



Figure 2

6. Caulk ends of threshold (important for effective sealing and moisture control).
7. Secure threshold to floor with supplied screws. (When fastening to concrete, use anchors; anchors not included.)
8. Install vinyl seal: w/ ribbed surface upward, insert legs of vinyl seal into grooves on threshold top).

[www.pemko.com](http://www.pemko.com)

© 2010 Pemko Manufacturing Co.  
RT10\_WEBINS  
Rev 1 - 01.28.10