


INSTALLATION INSTRUCTIONS

448 BLUM® SERVO KIT INSTRUCTION SHEET

TOOLS REQUIRED:

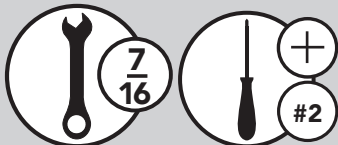

ESTIMATED ASSEMBLY TIME:

10 MIN

STEP 1:

Align the front edge of the servo plate to the back of the rear slide strap (See Fig 1).

Note: Ensure plate is centered.

Install using (3) #8x 3/4 screws to secure the mounting plate to the cabinet floor.

STEP 2:

Adjust the jack screws to touch the back of the cabinet wall. Then tighten the jam nuts to secure in place (See Fig 2).

STEP 3:

Follow BLUM® servo instructions to complete wiring procedure.

FIG 1

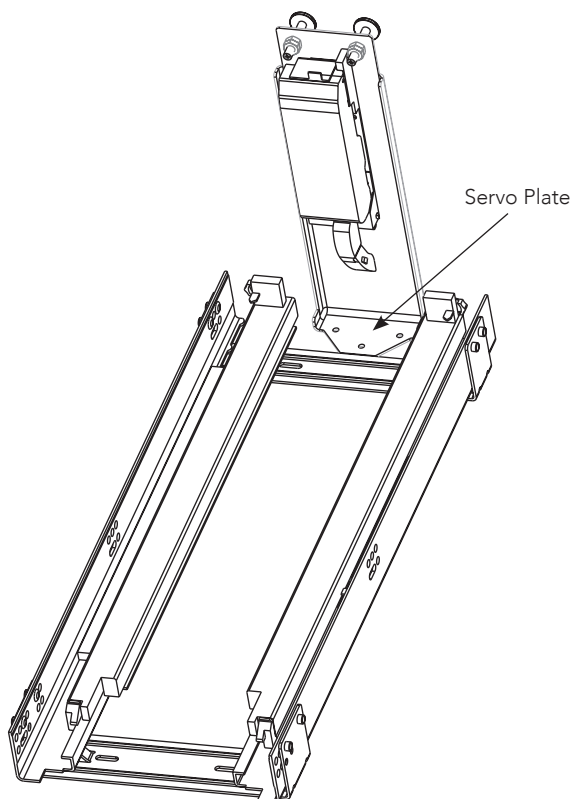


FIG 2

Adjust until the jack screws touch the back wall of cabinet.

