

Abbreviations chart:

S = thickness of the cabinet side

D = required door overlay

T = max. door thickness

K = drilling distance

A = reveal

L = gap between door and carcass

H = height of the mounting plate


General Information

SALICE

Boring Pattern - Series F


Boring distance from the edge
of the door:

94° 3 to 15 mm

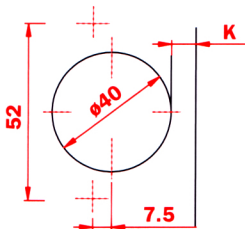


Screw-in

How to calculate your overlay:
Full overlay hinge

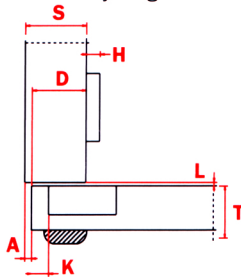


$$D = (19 + K) - H$$

Half overlay hinge

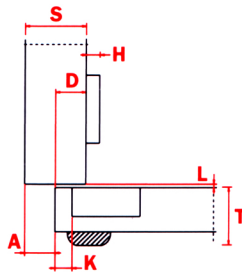

$$D = (8 + K) - H$$

Inset door hinge

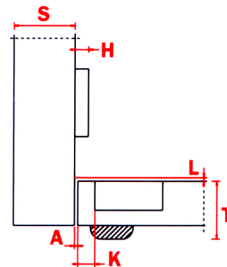

$$D = (-3 + K) - H$$