PEMKO
ASSA ABLOY

DOOR BOTTOMS

Applies to the following door bottom:

405_V

Testing/Ratings:

10C

CLASSIFIED C UL US 4L10

Category J gaskets for use with listed steel frames and/or classified steel covered composite, hollow metal doors rated up to and including 3 hours; wood and plastic covered composite doors rated up to and including 1-1/2 hours; and wood core doors rated for 20 minutes.

Tools Required:

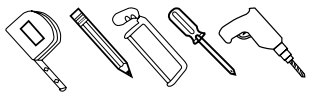

Installation Instructions:

1. Measure, mark, and trim door bottom sweep to fit width of door, allowing clearance between the two stops.
2. Close door and secure door bottom sweep to outside bottom edge of door with supplied screws. Top of door bottom sweep should be 2-1/2" above threshold (or floor).
3. With door closed, depress and hold sweep in closed (down) position. With supplied screw, attach nylon cam to door stop on latch side of door opening. Cam should be 1-3/8" above threshold and up against the sweep. When door is closed, the cam will hold the sweep in closed (down) position.
4. When door is opened, the sweep flips up to allow clearance over carpet.

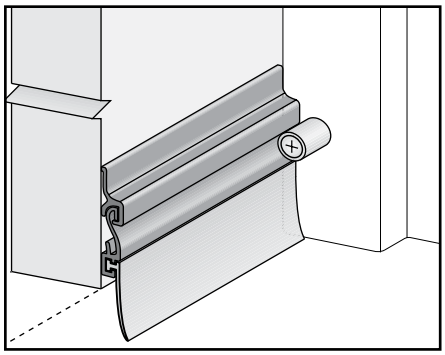

405_V - Installed

www.pemko.com

© 2009 Pemko Manufacturing Co.
DB17_WEBINS
Rev 1 - 07.08.09